



7 Foundation Brake

- 7.01 Drum Brake
- 7.02 Disc Brake
- 7.03 Foundation Brake Components

8 Air Suspension Control

- 8.01 Levelling Valve
- 8.02 Linkage
- 8.03 Rotary Slide Valve
- 8.04 Lift Axle Control Valve

9 Electronic Air Suspension Control

- 9.01 ECAS ECU
- 9.02 ECAS Solenoid Valve
- 9.03 ECAS Remote Control Unit
- 9.04 ECAS Height Sensor
- 9.05 Electronic Leveling Module
- 9.06 Pressure Sensor

10 Axle Devices

- 10.01 Air Spring
- 10.02 Shock Absorbers
- 10.03 Slack Adjuster

11 Drive Line

- 11.01 Clutch Servo

12 Trailer Coupling

- 12.01 Coupling Head
- 12.02 Quick Coupling
- 12.03 Line Filter
- 12.04 Cable spiral
- 12.05 Susie
- 12.06 Dummy Coupling
- 12.07 Parking Socket

13 IVTM

- 13.01 IVTM universally
- 13.02 IVTM Truck
- 13.03 IVTM Trailer

14 Bus Specific Devices

- 14.01 Door ECU
- 14.02 Door Control Valve
- 14.03 Door Sensor
- 14.04 Climate Control ECU
- 14.05 Temperature Sensor

15 Universal Application Devices

- 15.01 Non Return Valve
- 15.02 Double Check Valve
- 15.03 Throttled Check Valve
- 15.04 Shut-Off Cock
- 15.05 Silencer
- 15.06 Air/Hydraulic Chamber
- 15.07 Master Cylinder
- 15.08 Vacuum Pump
- 15.09 Operating Cylinder
- 15.10 Multi-position Cylinder
- 15.11 Directional Control Valve
- 15.12 Servo Unit

16 Accessories

- 16.01 Connecting Cable
- 16.02 Solenoid Valve
- 16.03 ABS-Module
- 16.04 Relay
- 16.05 Hose/ Tube
- 16.06 Grease

17 Testing and Diagnosis

- 17.01 Measuring Device
- 17.02 Diagnostic Program
- 17.03 Diagnostic Devices